Yaesu FT-2900 Cheat Sheet

Settings & Set Mode

Press MHz(SET) for one sec.

Then rotate dial to select Set Mode Item. Press MHz(SET) After selection is made press MHz(SET) for one sec. to save.

-Scan-Resume Mode (p. 45) -Sl Item 41 -Display brightness(p. 19) -A Item 16 -Stop scan beep Item 5 Change transmit power(p. 16) Press LOW(A/N) or C on microphone

-Skip channel when scanning(p. 46) Item 47 -Auto power off(p. 63) Item 1

Memory Bank Operation(p. 39)

Eight Memory Banks can be set up easily using software. I like RT Systems software and cables. Chirp is free software, but is more difficult to use and you will need to buy a separate cable. Once you have Banks set up and loaded in the radio use the following procedure to select a Bank.

M/W button switches between VFO (Variable Memory Operation) and Memory mode. Make sure you are in memory mode.

To select a Bank. Press * on microphone to activate "Memory Bank" mode. Then press # to increment Banks.

PMS Band Limit Memory Scan-Resume(p. 47)

PMS 1 contains all 2 meter ham frequencies. Press MHz(SET) look for "PMS" icon.

Set Tone

Press MHz/SET for 1 second Select # 49 SQLTYP Press MHz/SET Rotate dial to TONE Press MHz momentarily Rotate dial to #52 TN FRQ Press MHz to select Tone Frequency Press MHz for 1 second to save

Weather

P4 on microphone toggles weather

Revised: 01-04-17 P. Vanderschaegen KF7SJK

Toggle Alphanumeric/Frequency Press and hold AN/LOW for 1 sec.

Home Button

Press D/MR(MW) to go to 146.520

Phonetic Alphabet	
A - alpha	N - november
B - bravo	O - oscar
C - charlie	P - papa
D - delta	Q - quebec
E - echo	R - romeo
F - foxtrot	S - sierra
G - golf	T - tango
H - hotel	U - uniform
I - india	V - victor
J - juliet	W - wiskey
K - kilo	X - x-ray
L - lima	Y - yankee
M - mike	Z - zulu